






## SPRAY GUN SET UP SELECTOR: Gun Inlet Pressure 2.0 bar or as stated

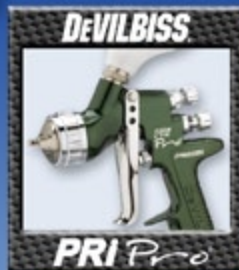


PRI Filler/Primer Gun

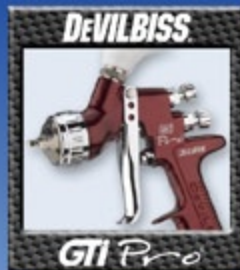


GTi Pro Topcoat Gun

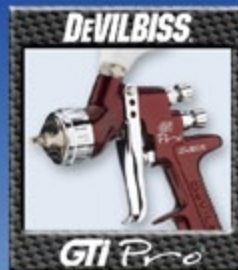


GTi Pro Topcoat Gun

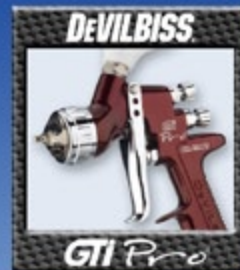

GTi Pro Topcoat Gun

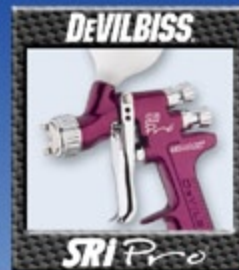

SRi Pro Spot Repair Gun

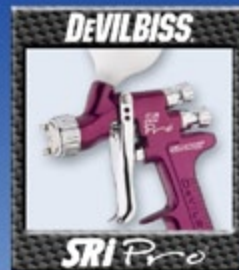


SRi Pro Spot Repair Gun


Air Cap No & Technology:		P1 (Trans-Tech)	H1 (HVLP)	T1 (Trans-Tech)	T2 (Trans-Tech)	HS1 (HVLP)	TS1 (Trans-Tech)
PRIMERS & FILLERS	Priomat 1K Washprimer 4075 New	1.4 - 1.5 mm	Use PRI	Use PRI	Use PRI	Use SRi	0.8 - 1.2 mm
	Priomat 1K Washprimer 4085	1.4 - 1.5 mm	Use PRI	Use PRI	Use PRI	Use SRi	0.8 - 1.2 mm
	Permasolid HS Express Surfacer 5250	1.5 - 1.6 mm	Use PRI	Use PRI	Use PRI	Use SRi	1.2 mm
	Permasolid HS Premium Surfacer 5310	1.5 - 1.6 mm	Use PRI	Use PRI	Use PRI	Use SRi	1.2 mm
	Permasolid Spectroflex 5400 (Sanding Surfacer)	1.5 - 1.6 mm	Use PRI	Use PRI	Use PRI	Use SRi	1.2 mm
NON SANDING PRIMER	Permasolid Spectroflex 5400(Non-sand Surfacer)	Use GTi Pro	Not Recommended	1.3 - 1.4 mm	1.3 - 1.4 mm	0.8 - 1.0 mm	0.8 - 1.0 mm
	Permasolid HS Vario Surfacer 8590	Use GTi Pro	Not Recommended	1.3 - 1.4 mm	1.3 - 1.4 mm	Use SRi	0.8 - 1.0 mm
	Permasolid HS Wet on Wet 5330	Use GTi Pro	Not Recommended	1.3 - 1.4 mm	1.3 - 1.4 mm	Use SRi	0.8 - 1.0 mm
WATERBORNE BASECOAT	Permahyd Base Coat Series 280/285	Use GTi Pro	1.2 - 1.3 mm	Do Not Use	1.2 - 1.3 mm	0.8 - 1.0 mm	0.8 - 1.0 mm
TOP COATS	Permasolid HS Top Coat Series 270	Use GTi Pro	1.2 - 1.3 mm	1.3 - 1.4 mm	1.3 - 1.4 mm	1.0 - 1.2 mm	1.0 - 1.2 mm




## SPRAY GUN SET UP SELECTOR: Gun Inlet Pressure 2.0 bar or as stated

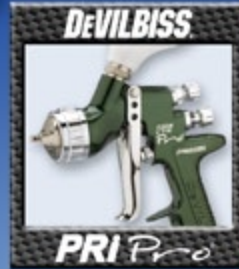


PRI Filler/Primer Gun

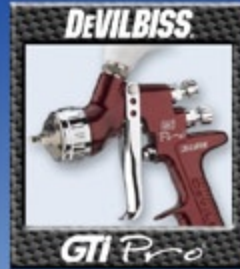


GTi Pro Topcoat Gun

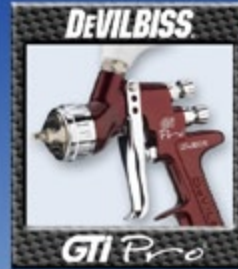


GTi Pro Topcoat Gun

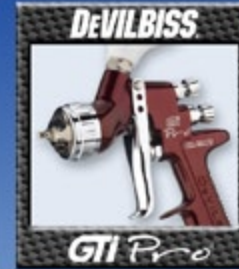

GTi Pro Topcoat Gun

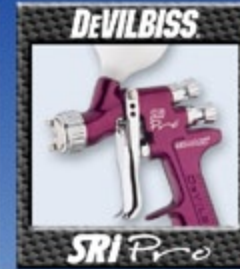

SRi Pro Spot Repair Gun

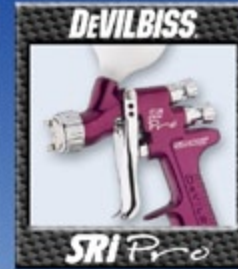

SRi Pro Spot Repair Gun

Air Cap No & Technology:		P1 (Trans-Tech)	H1 (HVLP)	T1 (Trans-Tech)	T2 (Trans-Tech)	HS1 (HVLP)	TS1 (Trans-Tech)
CLEARCOATS	Permasolid HS Clear Coat 8030	Use GTi Pro	1.3 - 1.4 mm	Do Not Use	1.3 - 1.4 mm	1.0 - 1.2 mm	1.0 - 1.2 mm
	Permasolid HS Clear Coat 8035	Use GTi Pro	1.3 - 1.4 mm	Do Not Use	1.3 - 1.4 mm	1.0 - 1.2 mm	1.0 - 1.2 mm
	Permasolid HS Diamond Clear Coat 8450	Use GTi Pro	1.3 - 1.4 mm	Do Not Use	1.3 - 1.4 mm	1.0 - 1.2 mm	1.0 - 1.2 mm
	Permasolid HS Optimum Clear Coat 8600	Use GTi Pro	1.3 - 1.4 mm	Do Not Use	1.3 - 1.4 mm	1.0 - 1.2 mm	1.0 - 1.2 mm