



STANDOX




PRI Filler /Primer Gun

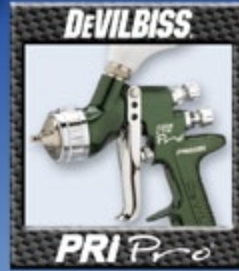


GTi Pro Topcoat Gun

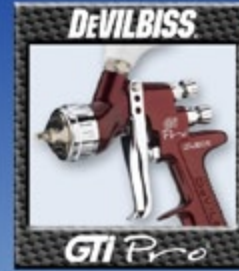


GTi Pro Topcoat Gun

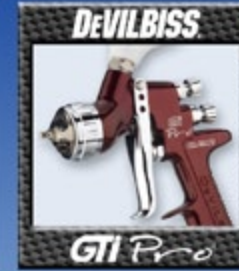

GTi Pro Topcoat Gun

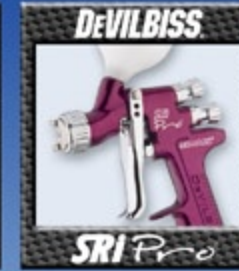

SRI Pro Spot Repair Gun

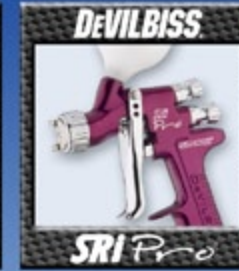

SRI Pro Spot Repair Gun

Air Cap No & Technology:

PI (Trans-Tech)

H1 (HVLP)

T1 (Trans-Tech)

T2 (Trans-Tech)

HS1 (HVLP)

TS1 (Trans-Tech)

		PI (Trans-Tech)	H1 (HVLP)	T1 (Trans-Tech)	T2 (Trans-Tech)	HS1 (HVLP)	TS1 (Trans-Tech)
PRIMERS AND FILLERS	1K Primer Filler	1.4 mm	Use PRI	Use PRI	Use PRI	Use SRI	0.8 - 1.2 mm
	VOC ProFiller	1.4 - 1.6 mm	Use PRI	Use PRI	Use PRI	Use SRI	1.2 mm
	VOC Premium Filler	1.4 - 1.6 mm	Use PRI	Use PRI	Use PRI	Use SRI	1.2 mm
NON SANDING PRIMER	VOC NonStop Primer Filler	Use GTi Pro	-	1.3 - 1.4 mm	1.3 - 1.4 mm	Use SRI	0.8 - 1.0 mm
WATERBORNE BASECOAT	Standohyd Basecoat	Use GTi Pro	1.2 - 1.3 mm	Do Not Use	1.2 - 1.3 mm	0.8 - 1.0 mm	0.8 - 1.2 mm
TOPCOATS	VOC Topcoat	Use GTi Pro	1.3 - 1.4 mm	1.3 - 1.4 mm	1.3 - 1.4 mm	1.0 - 1.2 mm	1.0 - 1.2 mm
CLEARCOATS	HS Clear	Use GTi Pro	1.3 - 1.4 mm	Do Not Use	1.3 - 1.4 mm	1.0 - 1.2 mm	1.0 - 1.2 mm
	VOC Premium Clear	Use GTi Pro	1.3 - 1.4 mm	Do Not Use	1.3 - 1.4 mm	1.0 - 1.2 mm	1.0 - 1.2 mm
	VOC Platinum Clear	Use GTi Pro	1.3 - 1.4 mm	Do Not Use	1.3 - 1.4 mm	1.0 - 1.2 mm	1.0 - 1.2 mm
	VOC HighPro Clear	Use GTi Pro	1.3 - 1.4 mm	Do Not Use	1.3 - 1.4 mm	1.0 - 1.2 mm	1.0 - 1.2 mm